

BELT PULLEY ASSEMBLY SECTION

皮帶輪組組裝示意

ALIGN

Apply Grease
塗上潤滑油

Bearing

軸承

φ 12x φ 21x5mm

One-way Bearing

單向軸承

φ 12x φ 20x11mm

One-way

Bearing Shaft

單向套

Belt Pulley 50T

皮帶輪50T

Bearing

軸承

φ 12x φ 21x5mm

CAUTION
注意

Special lubricating oil (silicone oil) for one-way bearings must be added during assembly. After 60~100 flights, be sure to disassemble and maintain and add lubricating oil to avoid one-way bearings slipping during flight.

組裝時，必須添加單向軸承專用(矽油)潤滑油，每飛行60~100趟後，務必拆開保養並添加潤滑油，以避免飛行中單向軸承產生打滑。